

# Lemonade Day!™



COASTAL ALABAMA



## TOOLS

Safety Glasses

Power Screw driver with Philips head

Small drill bit for pilot holes

## STEP 1

### BOARDS

2 **BLUE** (42 inches)

2 **GREEN** (34 inches)

### MATERIALS

8 x 2 1/2 inch screws ←

### Instructions

1. Match the Boards together as shown in *Diagram A* (TOP VIEW)



DIAGRAM A

2. Using Power Screw Driver use 2 1/2 inch screws in *Diagram B* (FRONT VIEW)

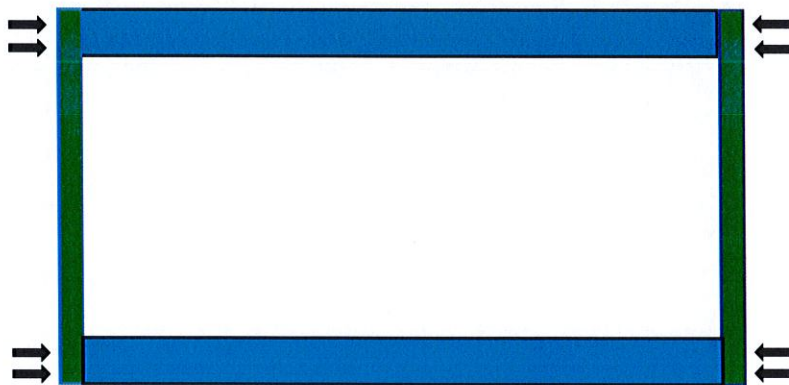


DIAGRAM B

## STEP 2

### BOARDS

4 **YELLOW** (12 inches)


1 **PINK** (42 inches)

2 **RED** (72 inches)

### MATERIALS

20 x 2 ½ screws ←

1. Match one side **YELLOW** boards to Green boards like *Diagram C* (TOP) *Diagram D* (SIDE)
2. Use 4 2 ½ inch screws in pre-drilled pocket holes. (2 per board)
3. Insert the **PINK** Board as shown in *Diagram C* using 4 2-1/2 inch screws
4. Match **RED** boards to **YELLOW** boards use 4 - 2 ½ inch screws to attach

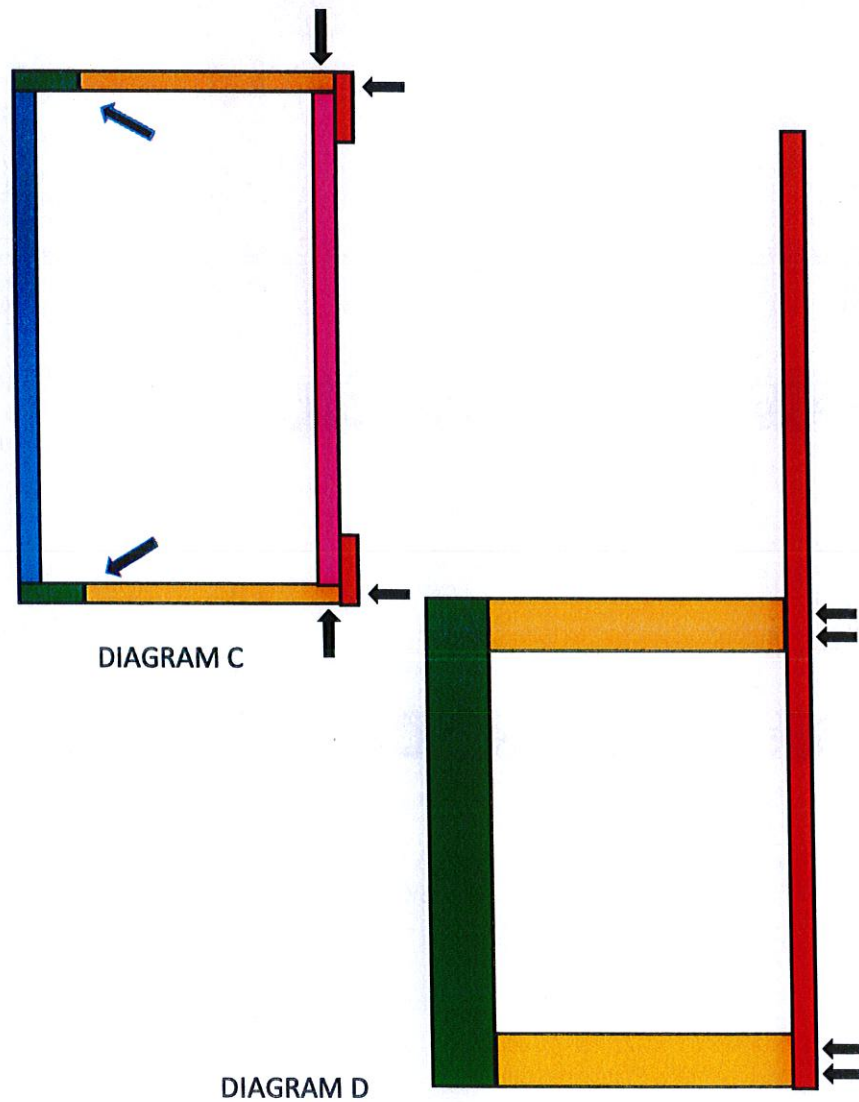

## STEP 3

### BOARDS

1 **ORANGE** (48 inches)

### MATERIALS

4 - 1 ½ inch screws →

### Steps:

1. Use 2 screws per side and attach **ORANGE** Board to **RED** Boards *Diagram E*

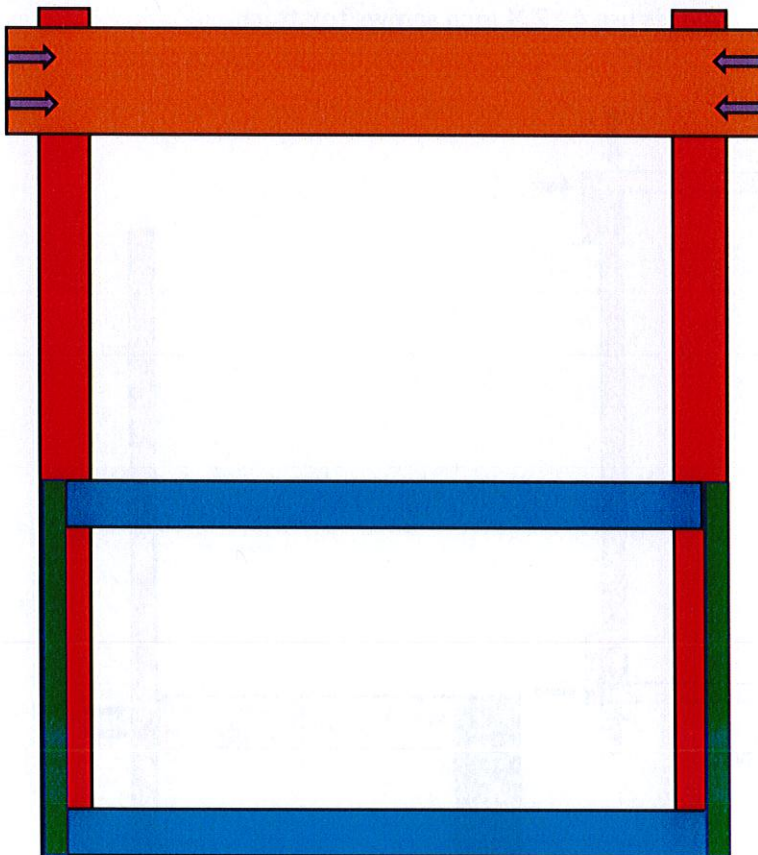


DIAGRAM E

## STEP 4

### Boards

14 - **WHITE** (34 inches)

### Materials

56 - 1 ½ inch screws 

### Steps

1. Use **8 WHITE** Boards to cover front.
2. Use small drill bit to drill Pilot Holes for screws
3. Fasten each board with 4 screws (2 on top 2 on bottom)

*Diagram F*

4. Use **3 WHITE** Boards to cover each side. Fasten each board with 4 screws

*Diagram G*


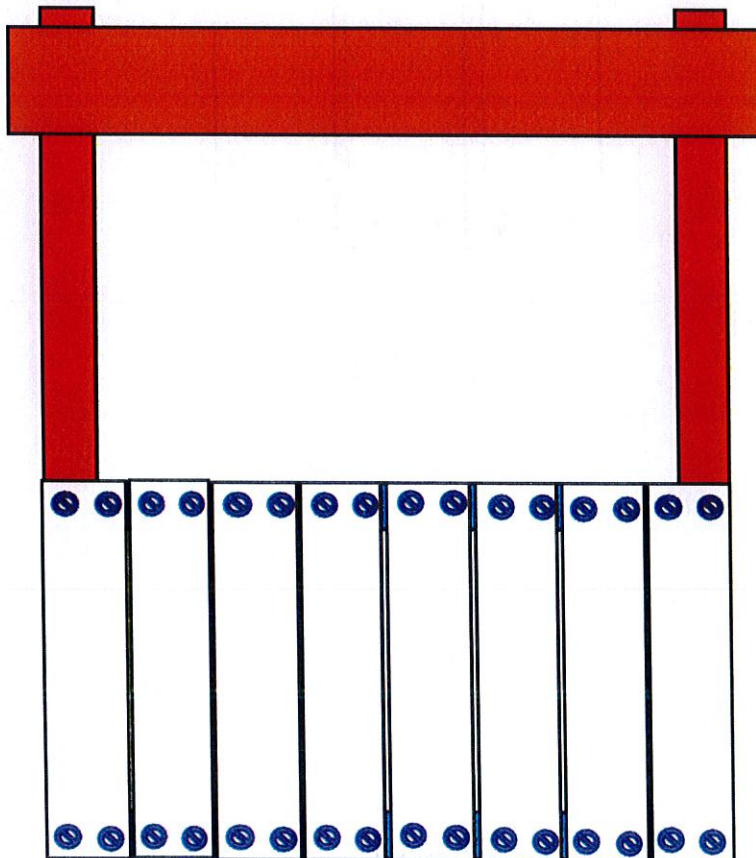


DIAGRAM F

DIAGRAM G

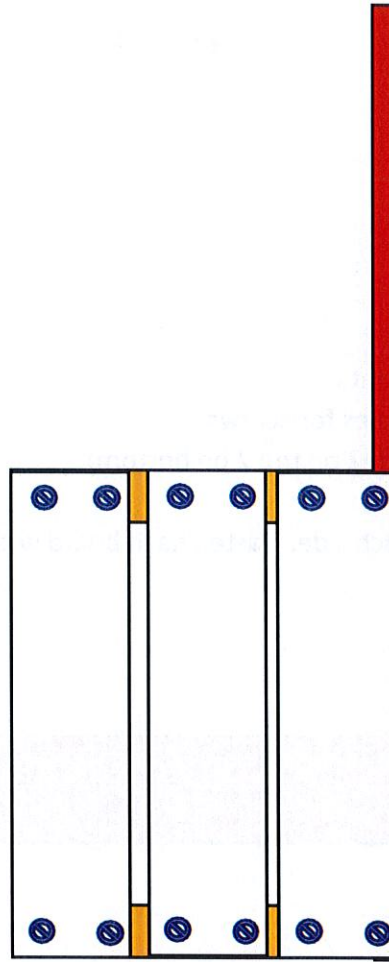

## STEP 5

### Boards

1 - **PLYWOOD** (20 inches x 48 inches)

### Materials

10 – 1 ½ inch screws

1. Center **PLYWOOD** to frame top
2. Attach using 10 screws

*Diagram H*

DIAGRAM H

